



Remove and install alternator drive belt.

Depending on alternator design, grip shaft with hexagon socket screw key, screw with internal serrations or Torx socket screw key.

Release nut with special tool 12 7 110.

*Installation:*

Tightening torque, 12 31 2AZ / 12 31 3AZ.