



Switch off ignition.  
Connect DIS Tester.

Release screw connection of electronics box (1).

*Installation:*

Tightening torque, 12 90 4AZ.

Remove electronics box (1).

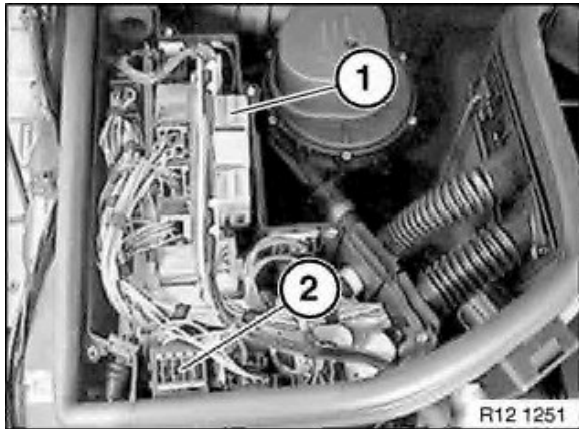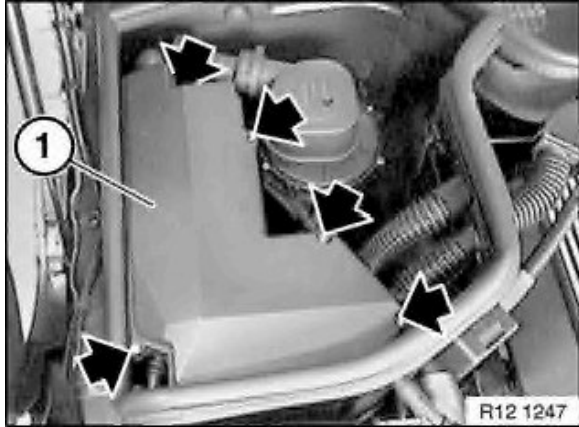

Arrangement:

1. Main relay of Digital Motor Electronics
2. Engine fuses of Digital Motor Electronics

*Notes on troubleshooting:*

If the starter motor cranks the engine during the starting sequence but the engine fails to fire, then:

1. Check engine fuses
2. If fuses are blown, replace them completely with fuse holder
3. Find out why fuses have blown

Continue troubleshooting as per DIS instructions.

