



Remove cover from top of radiator.

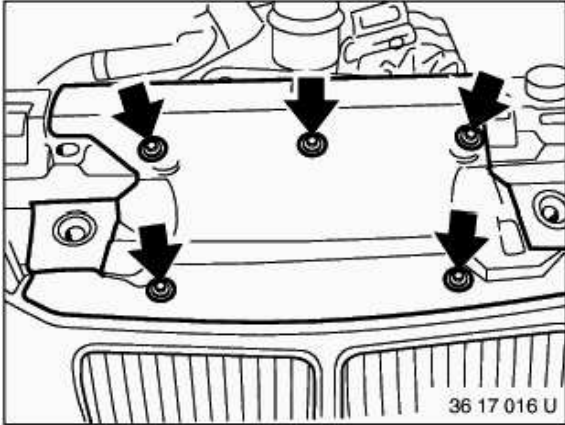



If applicable, remove underbody protection from front, refer to 51 47 490

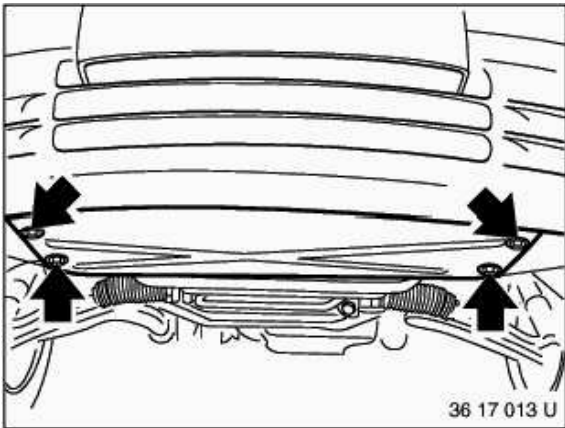


### Version 1

Unfasten screws (1...3) from fan carrier.

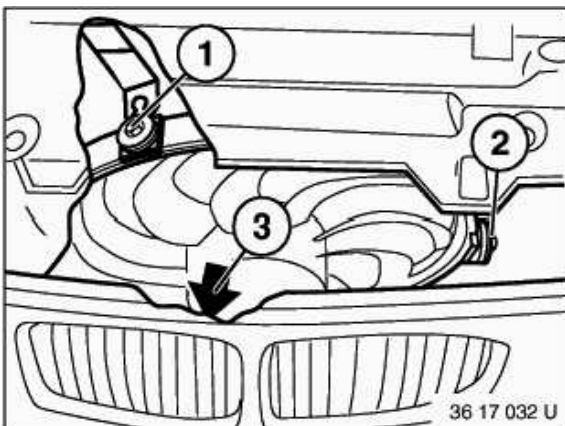

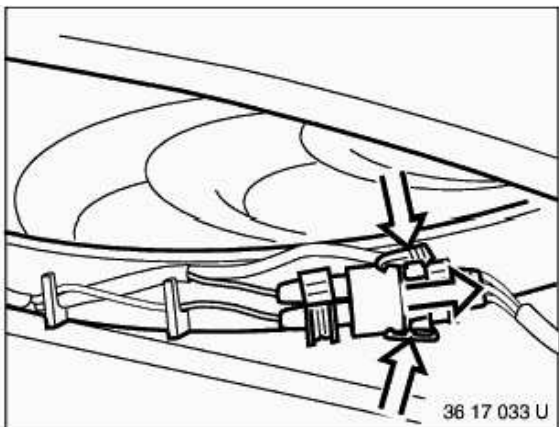


Disconnect connector.

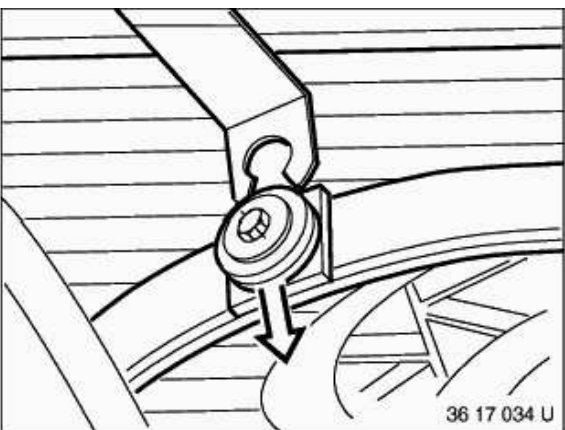

Remove fan bracket and fan from retaining shoe and lift out.

### Version 2

Remove complete front bumper,  
refer to 51 11 000

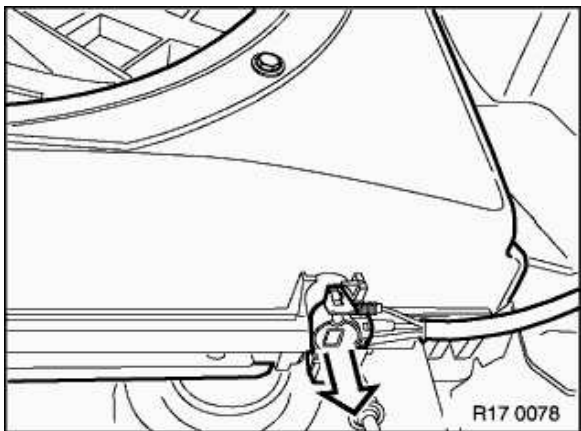

Disconnect connector.

Unfasten screws from fan carrier.  
Remove fan carrier from underside.

