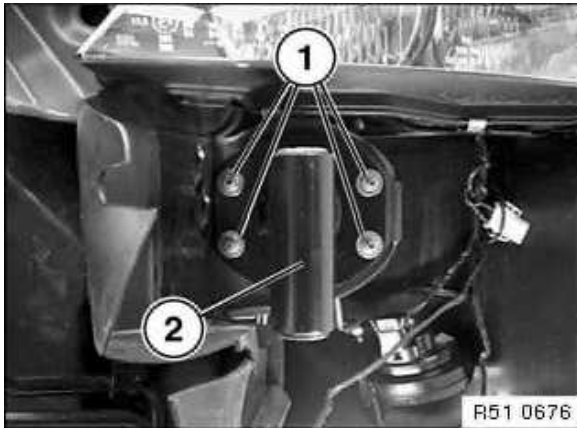


**(Bumper removed)**

(If necessary, remove front bumper, refer to 51 11 000)

Unfasten nut (1) and remove shock absorber (2).

Tightening Torque, refer to Technical Data 51 11 3AZ

**Installation:**

Height of bumper is determined by turning the socket head cap screw (1) on the shock absorber (2).

Adjust front bumper,  
refer to 51 11 000

