


Remove mirror glass,  
refer to 51 16 026

Unfasten screws (1) and pull front section of housing (2)  
backwards to remove.

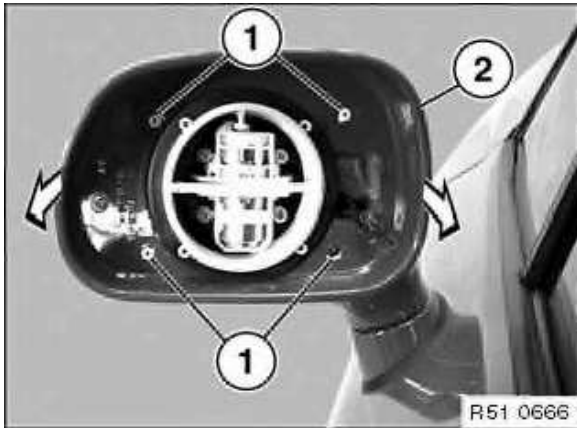

Carefully slide guide (1) forwards (risk of damage) and remove  
rear section of housing (2).

