

Remove door trim panel,
refer to 51 41 000

Lift out finisher strip (1) and remove.

Unfasten screw (2) and remove loudspeaker finisher strip (3).

