

Remove rear bumper,
refer to 51 12 000

Loosen nut (1) and pull vibration damper (2) backwards to
remove.

