


Note:

Removal in event of faulty gear for longitudinal seat adjustment,
refer to 52 10 899.


Unfasten seatbelt screw (1).

Installation:

Tightening Torque,
refer to Technical Data 72 11 1AZ.

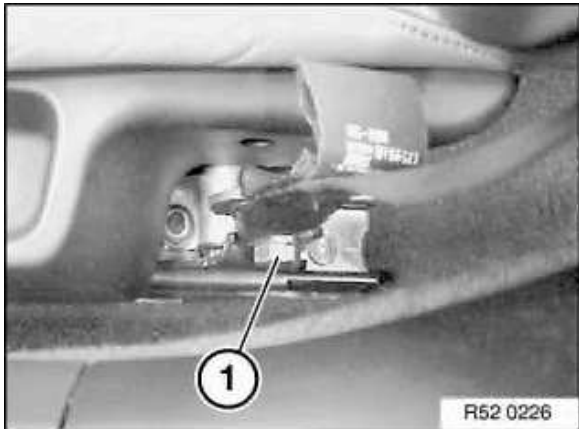

Withdraw seatbelt strap (1) from seatbelt guide (2).

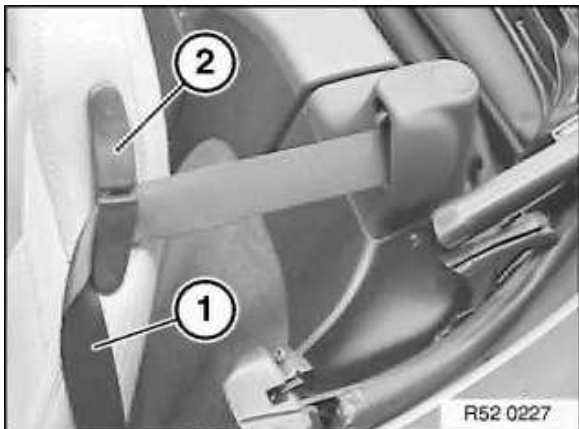



Release screws (1) at front.

Installation:

Tightening Torque,
refer to Technical Data 52 10 1AZ.

Move front seat as far back as possible.

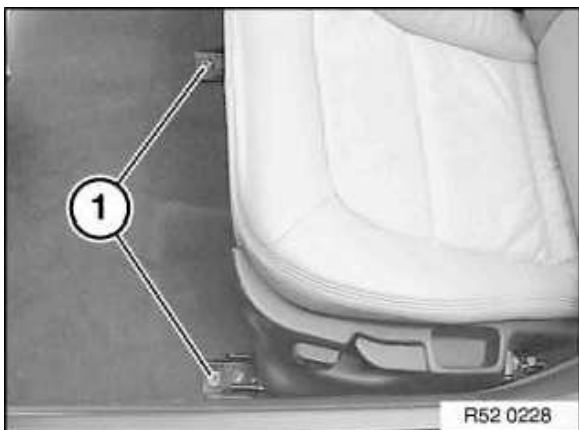


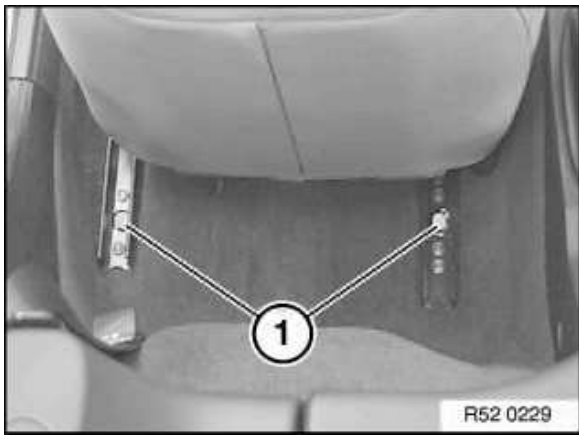

Release screws (1) at rear.

Installation:

Tightening Torque,
refer to Technical Data 52 10 1AZ.

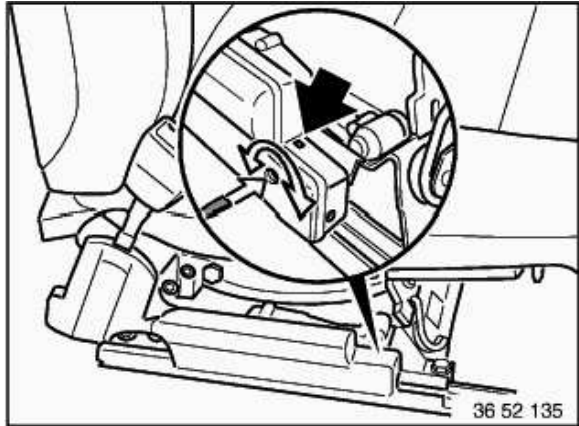

Caution!

Disarm seatbelt lock tensioner before removal:
Turn slotted head screw until green mark in sight glass
changes to red.


Installation:

Arm seatbelt lock tensioner:
Turn mark to green.
Seatbelt lock tensioner is not functional when marker is red
(danger to life).




Warning!

When removing and/or connecting up airbag control unit
(passenger side), ensure that terminal "R" is switched off
and/or that battery is disconnected.

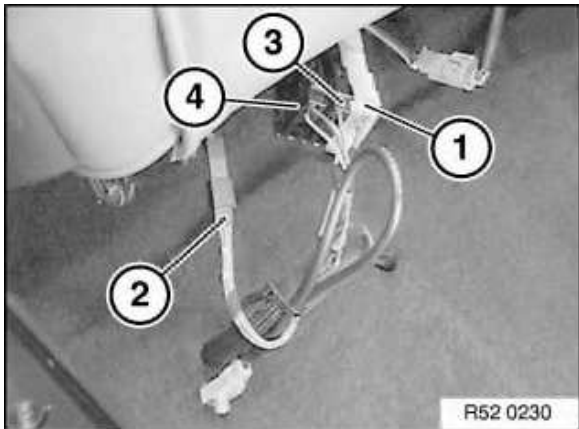

Disconnect plugs (1 and 2).
Version with seat heating:
Disconnect plugs (3) and (4).
Lift out front seat.

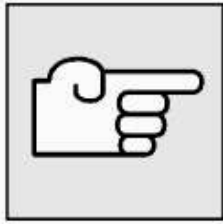**Installation:**

Floor carpet must not enter area between seat rails and floor panel beside screw points (grating noises).

Tightening sequence:

Tightening Torque,

refer to Technical Data 52 10 1AZ.

Front inner, outer; then rear inner, outer.