




Unscrew screw.

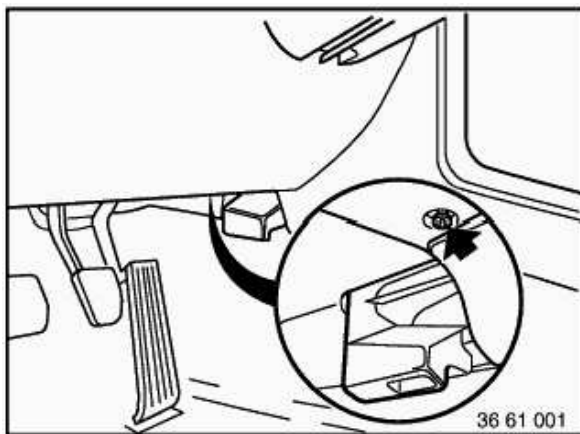

Unscrew screw.

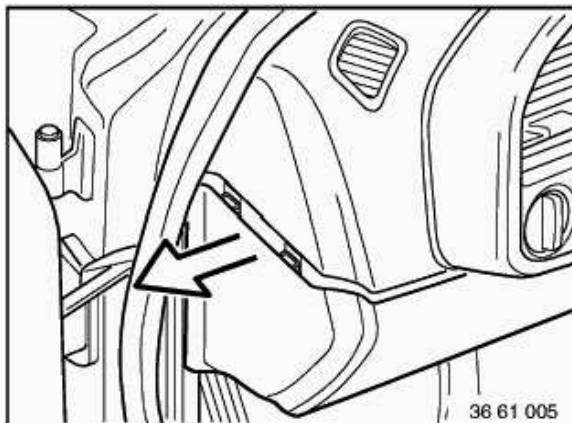

Pull bottom trim panel to the side out of the clips.

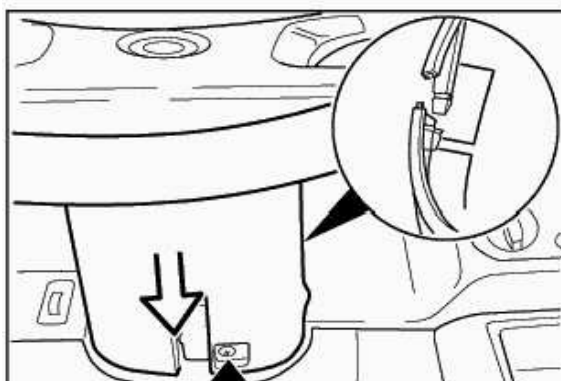

Remove screw and take off lower section of steering-column panelling.