


Detach caps.


Unscrew left and right nuts.

*Installation:*

Tightening torque, 61 61 10AZ

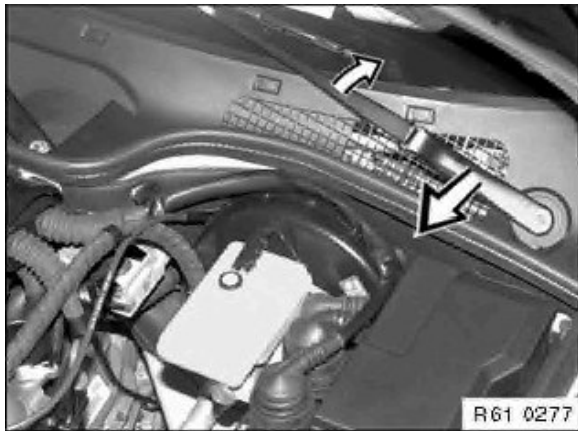

Fold up wiper arms up to end position and detach from drive shaft.

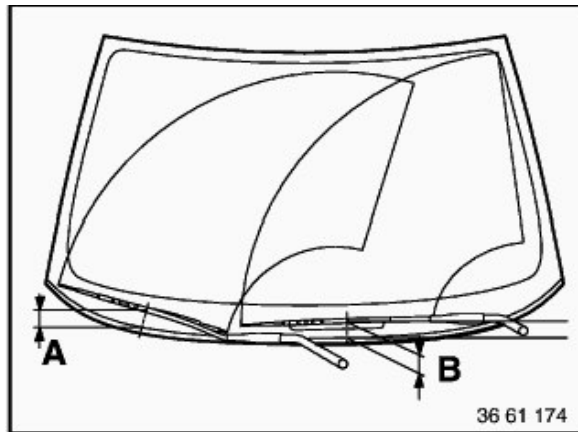

Adjusting dimensions of wiper arms:

Reference points are the mountings of the wiper blades on the wiper arms to the sealing lip of the cowl panel.

A = 45 mm

B = 25 mm