

**Up to 04/99:**


Unfasten nut and remove lamp socket.

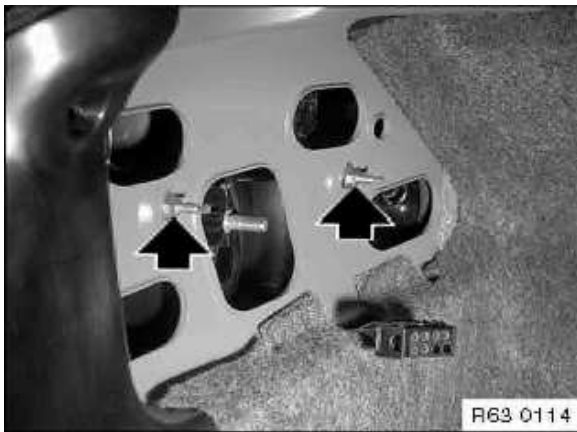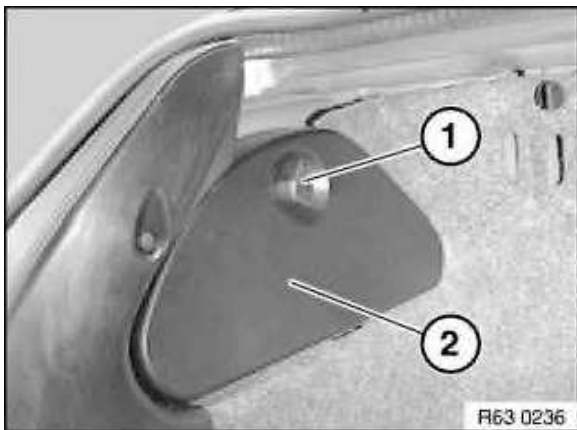

Unfasten nut and pull out rear light.

**From 04/99:**

Release nut (1) and remove trim (2).

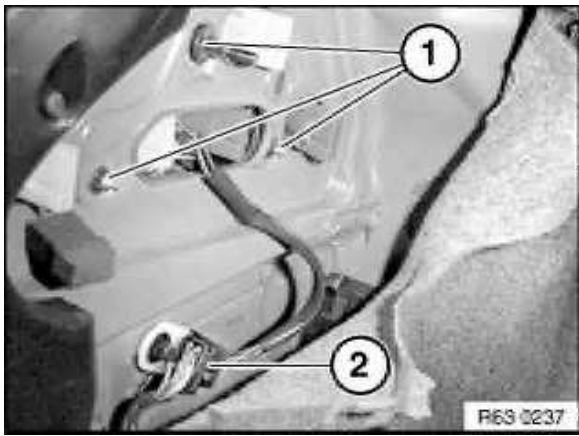

Unscrew nuts (1).

Disconnect plug connection (2) and pull out rear light.