


**Note:**

Remove and install panelling for instrument panel,  
refer to remarks in Group 51.

Remove brake light switch,  
refer to remarks in Group 61.

If applicable, remove clutch switch.

Remove retaining plate,  
refer to 35 11 000.

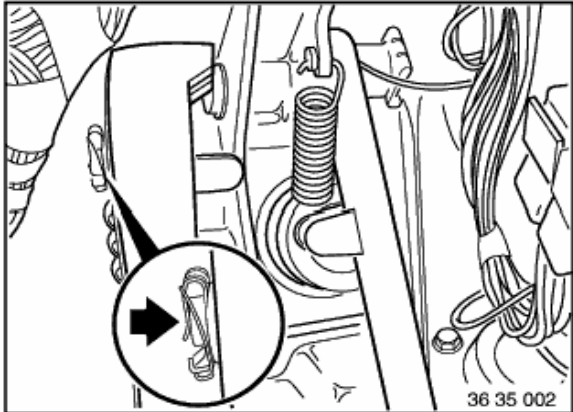


Take off locking clip for shaft pin of clutch-sensor cylinder.

Version with return spring for clutch pedal:

Disconnect return spring. Push out shaft pin.

**Installation:**

Grease sliding surfaces,  
refer to Technical Data.

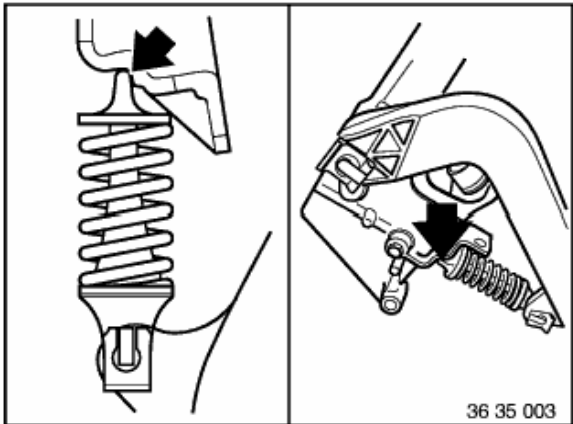


Version with over-centre helper spring:

Hold clutch pedal tightly, push out shaft pin, pull up clutch pedal  
slowly and take off over-centre helper spring.

**Installation:**


Grease sliding surfaces,  
refer to Technical Data.

Check for correct seating of spring holder in mounting block!

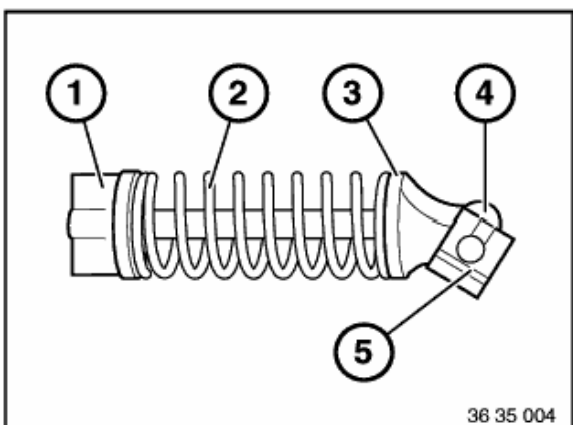


Assembly of over-centre helper spring:

- 1 Spring retainer
- 2 Over-center helper spring
- 3 Guide pin
- 4 Bearing pin
- 5 Locking clip

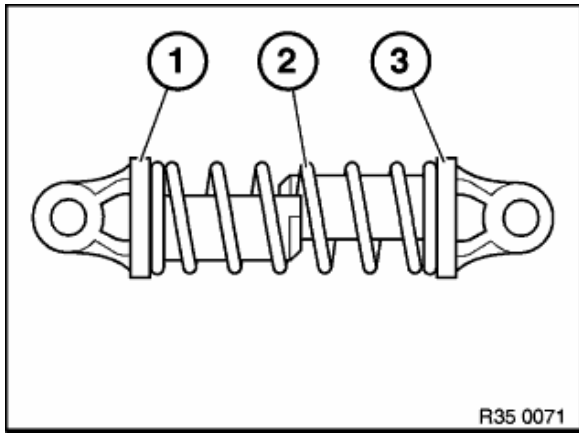

Over-center helper spring from model 3/97:

- 1 Spring retainer, black
- 2 Over-center helper spring
- 3 Spring retainer, gray

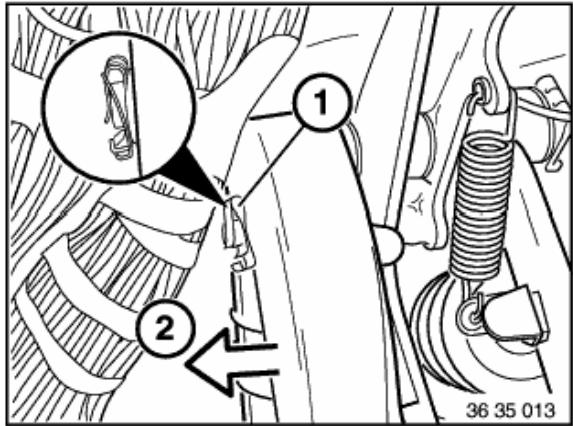

Take off locking clip (1) for clutch pedal.

Pull off clutch pedal (2).

**Installation:**

Check bearing sleeves, replacing if necessary.

Grease sliding surfaces,  
refer to Technical Data.