


**Note:**

This work step describes how the sealant bottle is replaced within the framework of inspection (M-Mobility system not used).


If the M-Mobility system has been used, also replace the transparent tire inflation hose.

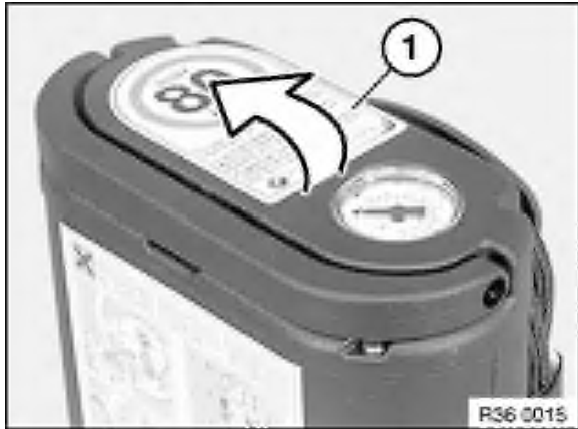

Remove seal film (1). Not necessary if M-Mobility system has already been used.

**Installation:**


Replace seal film.

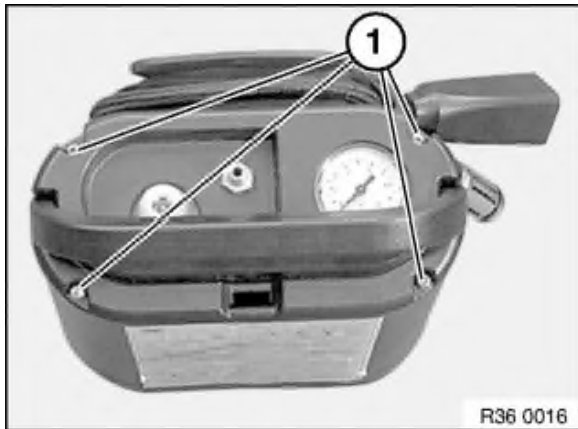

Release Torx threaded bolts (1) and raise cover as far as possible.

**Installation:**


Note Tightening Torque,  
refer to 36 12 1AZ

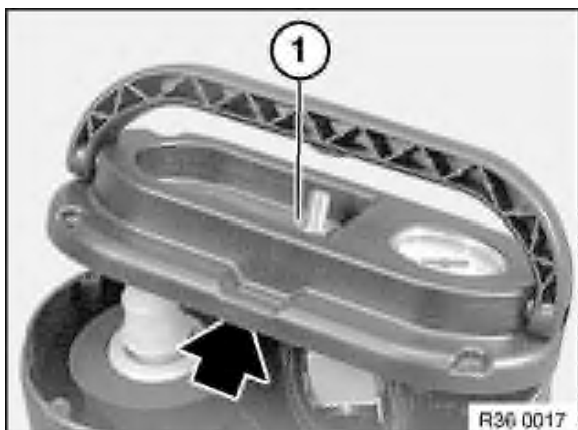


Release hexagon nut (1), grip nut firmly from underside.

**Installation:**


Note Tightening Torque,  
refer to 36 12 2AZ

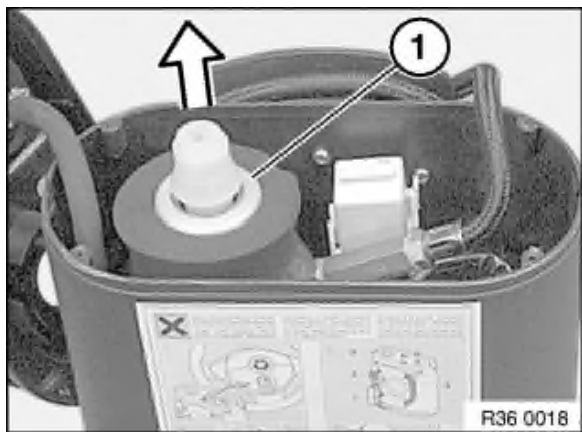

Lift sealant bottle out.

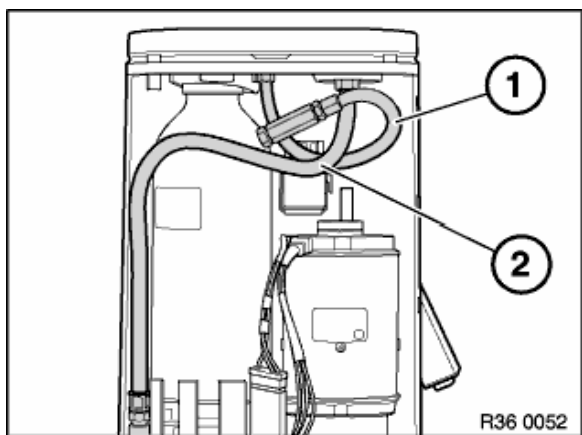

Ensure that hose is laid without any kinks.

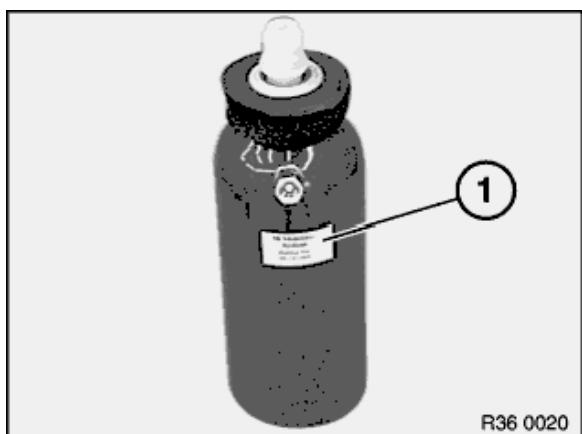

**Note:**

Note the expiration date when installing a new sealant bottle.