

(Bumper removed)

(If necessary, remove rear bumper, refer to 51 12 000)

Unfasten screws (1) and remove bracket (2).

Installation:

Tightening Torque, refer to Technical Data 51 12 5AZ

Adjust rear bumper,

refer to 51 12 000

