


Unclip headlight by inserting a screwdriver through upper aperture. Pull off connector. Disconnect steel-wire clamp and pull out light bulb.

Caution!


Do not take hold of glass part of bulb with bare fingers. Only take hold of bulb on base or with a clean cloth or packaging of light bulb.

If necessary, adjust foglight, refer to 63 10 014

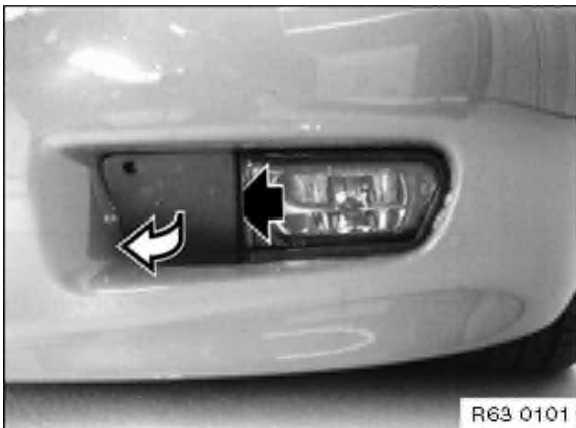

Roadster

Unclip and remove finisher

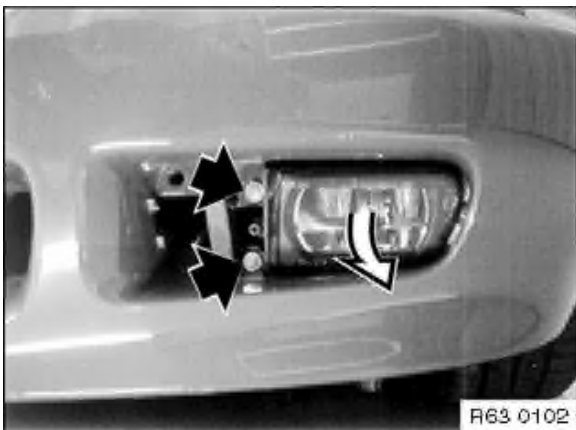

Unfasten screws, pry out headlight insert and remove connector.