
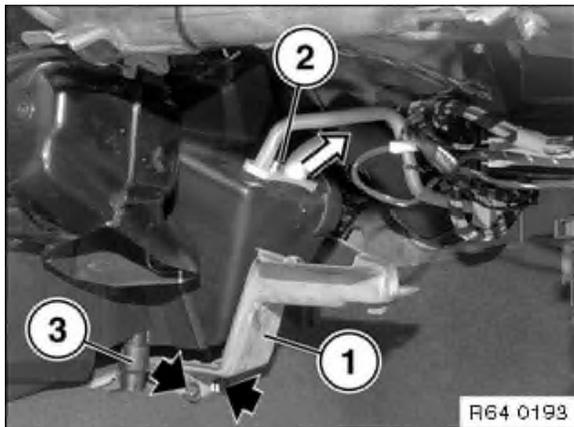


Air conditioner drained,
refer to 64 50 009

Unfasten screws and remove pipes.

Installation:

Replace O-rings

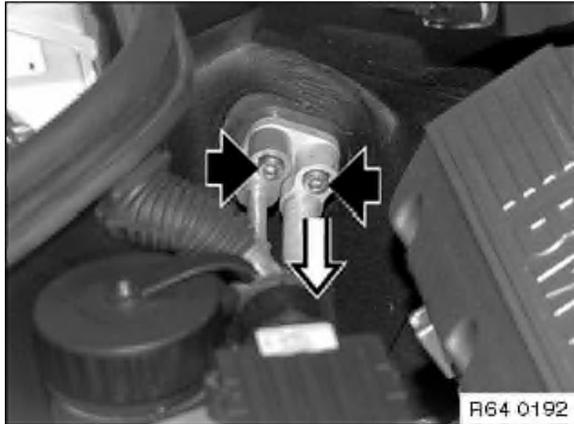

Unscrew holder (1).

Unfasten screw (2) and slide pipes upwards with pressure plate

Installation:

Replace O-rings



Loosen screws and take off cover.

Unfasten screws and remove expansion valve.

Installation:

Replace O-rings

After installation evacuate, fill and check air-conditioning system for leaks.

