


Unclip cover.

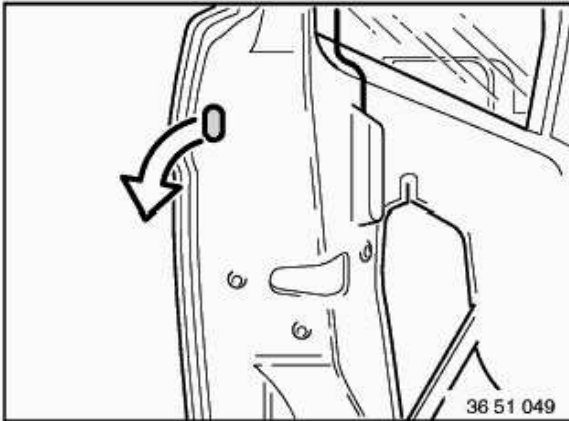

Push slide forwards with special tool 51 3 190 and remove finisher from outside handle.

Installation:

Install finisher for outside handle, pull slide backwards with special tool 51 3 190 and ensure it is correctly engaged.

