


Remove door trim panel,
refer to 51 41 000


Pull off inner foil and/or part of front acoustic insulation.

Note:

To prevent damage to paintwork, mask the area around the rivet with fabric adhesive tape.

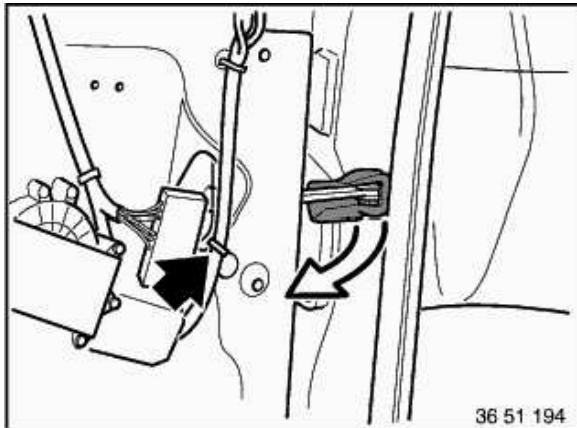


Slide rubber grommet to one side and, if necessary, unfasten cable strap.

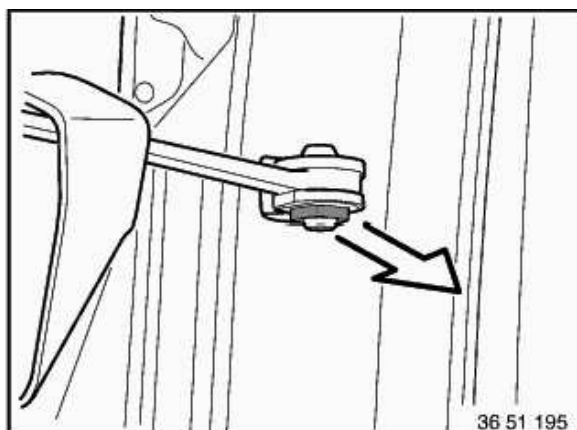


Old build status:


Pull lock plate off towards rear.

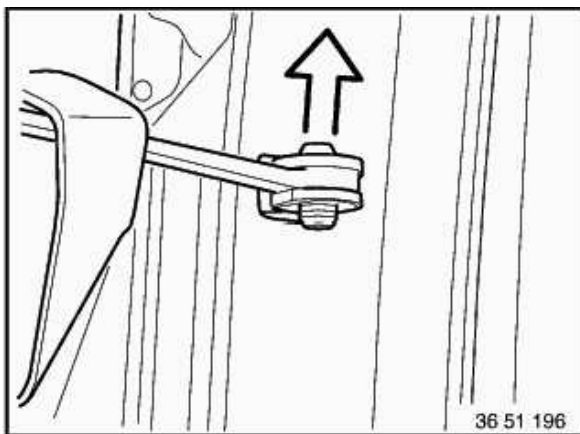


Old build status:
 Drive rivet out in upwards direction.
 Pull off rubber grommet.

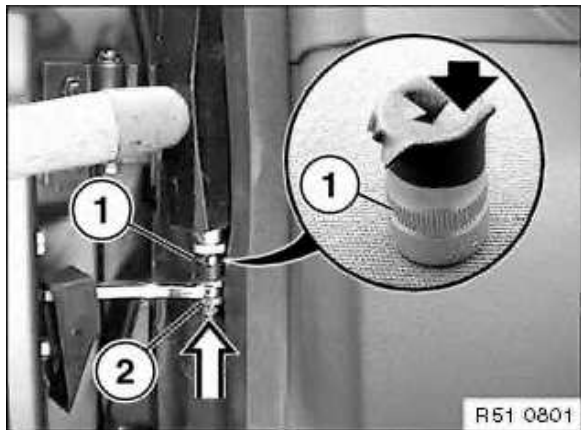

New build status:
 To brace a socket nut (1) (e.g. size 10 mm), mask with fabric adhesive tape (damage to paintwork) and use hammer (500 grammes).
 Drive rivet (2) upwards to remove.

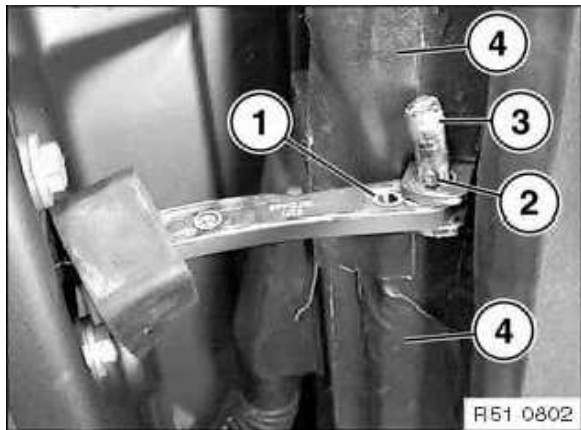

New build status:
Installation:
 Insert lug (1) in bore. Fit tab (2) on rivet (3) facing door. Pull off fabric adhesive tape (4).

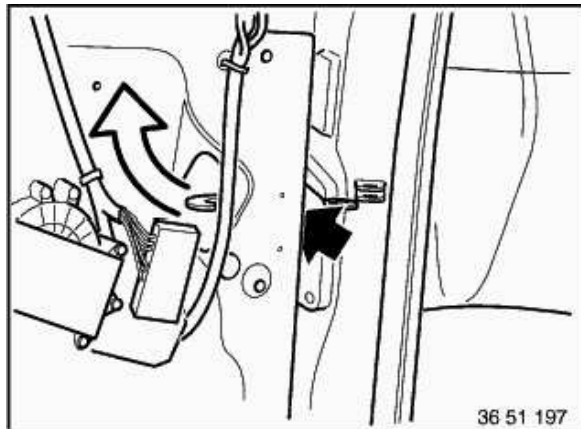

Unfasten screws.
 Push retarder upwards into door and remove.