


Remove hard top,
refer to 54 21 001.


Detach rubber seal (2) at bonding points (1).

Installation:

Use profile rubber adhesive (sourcing reference: BMW Parts Service) for bonding.

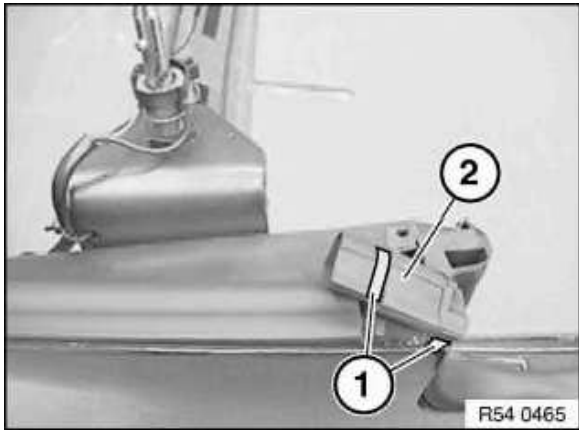

Carefully twist rubber seal (1) out of guide rail (2).

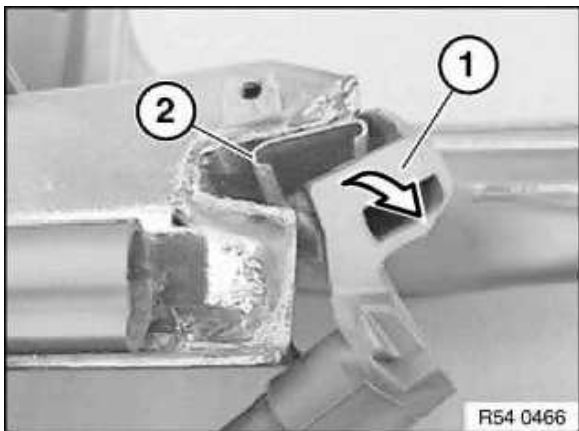

Installation:

Holes (1) in rubber seal must line up with journals (2) on guide rail.

